

Features:

1. Efficient D-class amplifier chip: using PAM8403 chip to ensure clear and stable sound quality.
2. Bluetooth 5.0 wireless connection: Supports Bluetooth 5.0 version, with more stable connection, longer transmission distance, and compatibility with multiple Bluetooth devices.
3. Dual channel stereo output: Provides $5W \times 2$ dual channel stereo output, suitable for various scenarios.
4. Compact design size: Compact and portable, easy to integrate and install.
5. Low impedance and high power characteristics: It has low impedance and high power output to meet different needs.

Product Description:

This model uses the D-class digital chip PAM8403 as the power amplifier chip, with a power supply requirement of 5V DC, connected using Bluetooth 5.0 version, and adopts dual channel stereo sound with low impedance and high power.

Parameter:

Product Name: Bluetooth Audio Amplifier Board

Function type: Audio amplification

Supply voltage: DC 5V

Bluetooth version: 5.0

Chip type: PAM8403*1

Number of channels: Dual channel stereo

Output power: $5W \times 2$

Appearance size: $45 * 42 * 25\text{mm}$

Installation hole spacing: $38 * 35\text{mm}$

Use connection method:

Connect two 5W speakers, connect 5V power supply, the red power indicator light is on, and the blue Bluetooth indicator light is flashing (at this time, it is in a waiting pairing state); Turn on your phone's Bluetooth, search for a device named "BT-HW" and pair it. After successful connection, the Bluetooth indicator light will remain on. After connecting, short press the "-" button to switch to the previous music, long press to decrease the volume; Short press the "+" button to switch to the next music track, long press to increase the volume; You can also use the adjustment knob in the middle of the button to adjust the volume. Turning it left will increase the volume, and turning it right will decrease the volume.

Attention: The positive and negative terminals of the power input terminal cannot be reversed.

Package Include:

1X power amplifier board+3X terminal wire


Use the connection method:


Connect the two 5W speakers, connect the 5V power supply, the red power indicator is on, and the blue BT indicator is blinking (waiting for pairing at this time);


Turn on the BT of the mobile phone, search for the device named "BT-HW" and pair it, and the Bluetooth indicator will be on after the connection is successful.

After the connection, press the button marked "-" to switch the previous music, and long press to reduce the volume; Short press the "+" button to switch to the next music, long press to increase the volume; You can also use the adjustment knob in the middle of the button to adjust the volume. Turn left to increase the volume and turn right to decrease the volume.

Note: Power input correct negative pole can not be reversed.

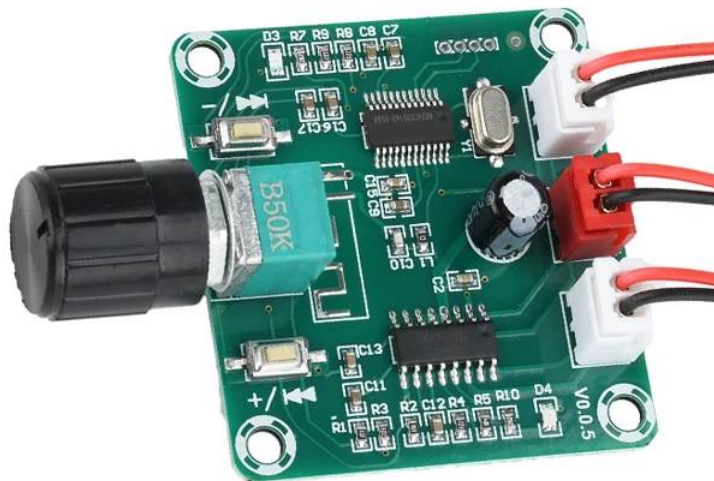

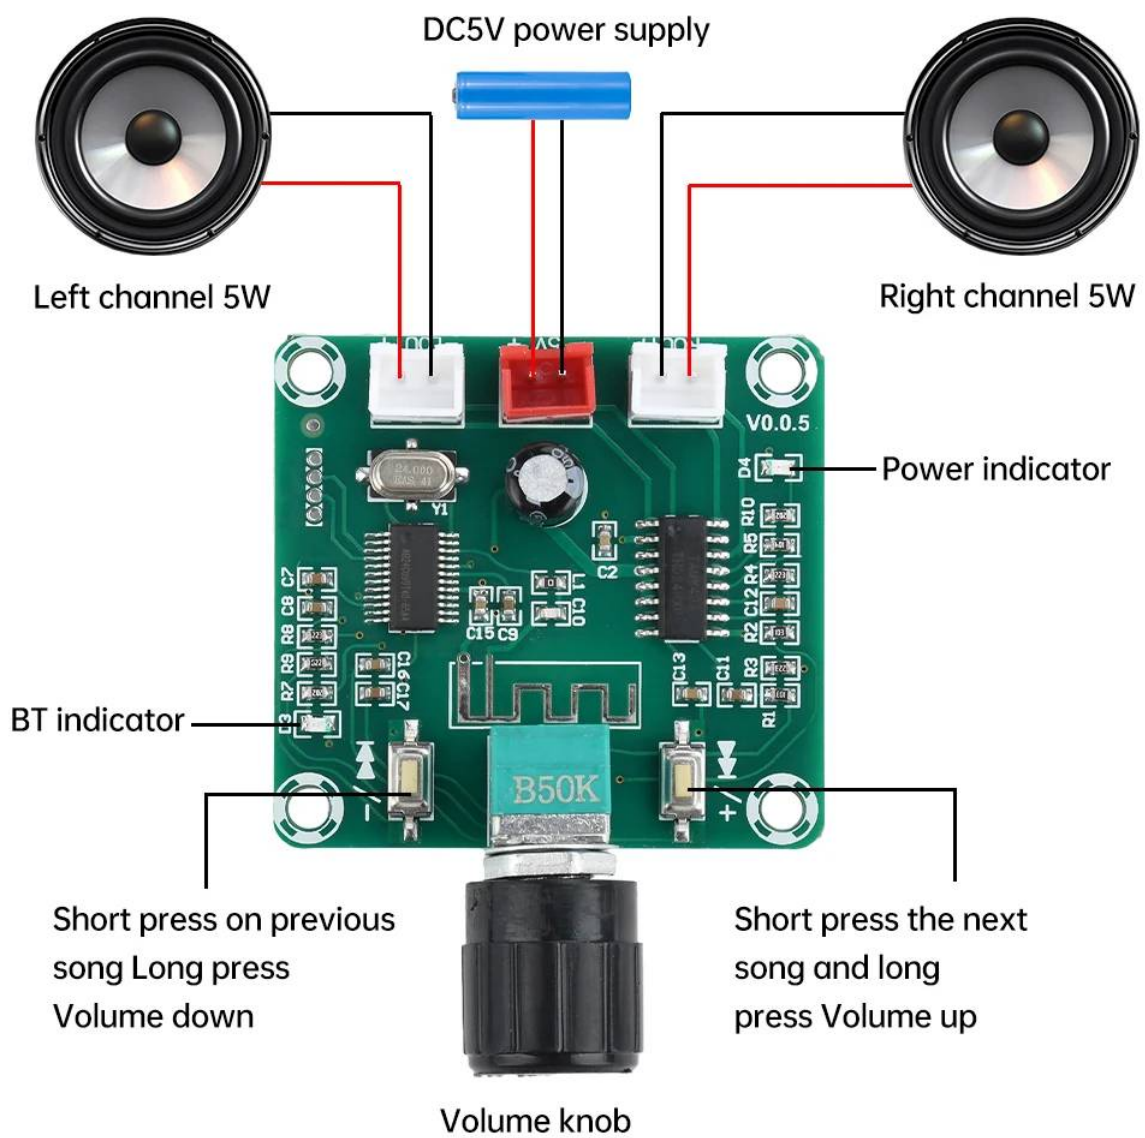

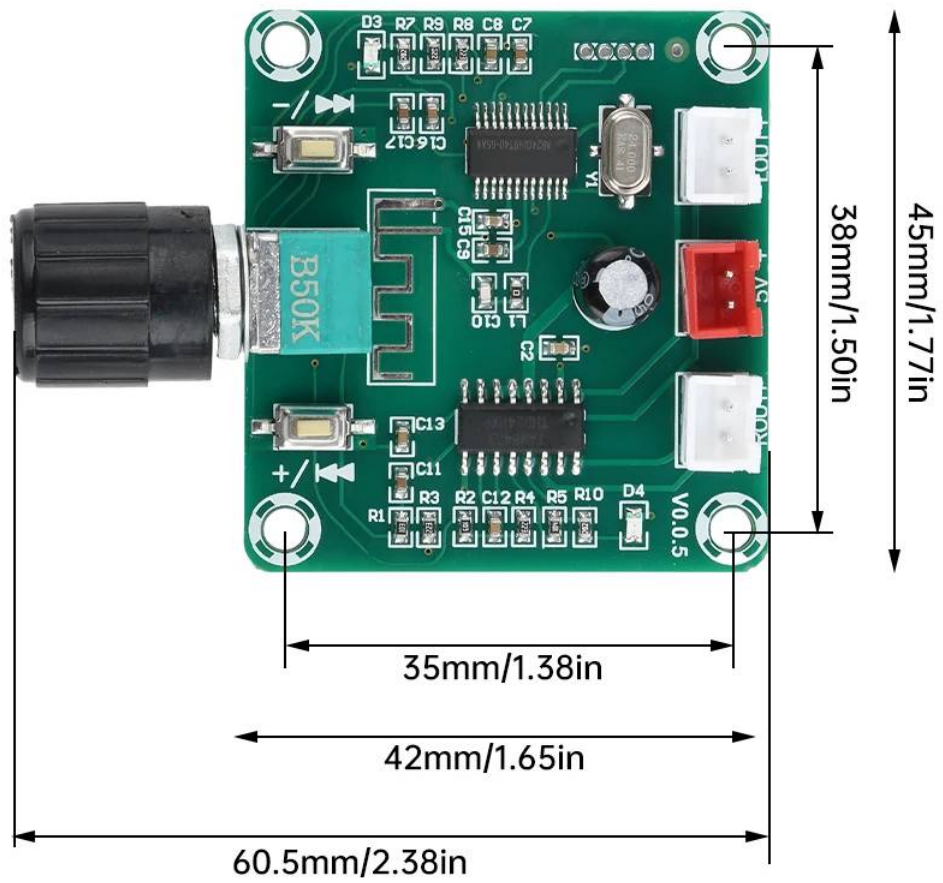

Product Description:

This model adopts Class D digital chip PAM8403 as amplifier chip, power supply requirement is DC 5V, using BT version 5.0 for connection, with two-channel stereo sound, low resistance and high power.



